





# BRAKE LININGS

	<b>66-105</b> replaces: (Cleveland- 66-30, 66-55) (Airborne 313)
	<b>66-106</b> replaces: (Cleveland- 66-2, 66-3, 66-56)
	<b>66-108</b> replaces: (Cleveland- 66-59)
	<b>66-109</b> replaces: (Cleveland- 66-87) (Cessna B30026) (Airborne 487)

## BRAKE RIVET TOOL #825

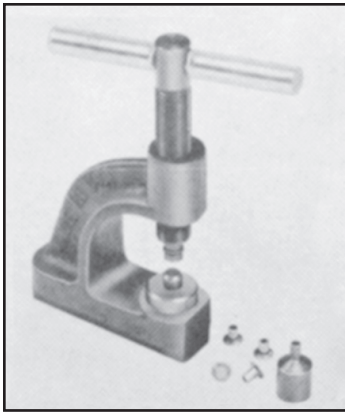

## METALLIC LININGS

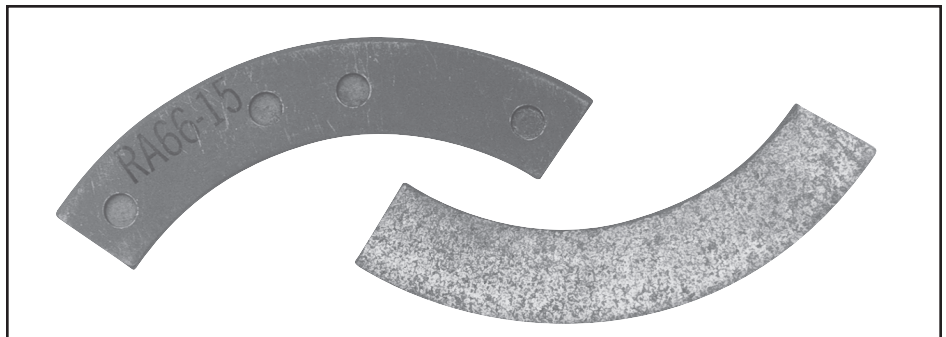

66-15  
66-62

66-19  
66-65

66-22  
66-66

66-33  
66-68

© 2005 Trimcraft Aviation